

PT-7528 Series (24-Port Copper Models) Quick Installation Guide

Moxa PowerTrans Switch

Edition 3.1, July 2018

Technical Support Contact Information www.moxa.com/support

Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045

MOXA[®]

© 2018 Moxa Inc. All rights reserved.

P/N: 1802075280023




Package Checklist

The Moxa PowerTrans switch is shipped with the following items. If any of these items are missing or damaged, please contact your customer service representative for assistance.

- 1 Moxa PowerTrans switch
- USB cable (Type A male to Type B male)
- Protective caps for unused ports
- 2 rackmount ears
- CD-ROM with user's manual and SNMP MIB file
- Quick installation guide (printed)
- Warranty card

Panel Layout

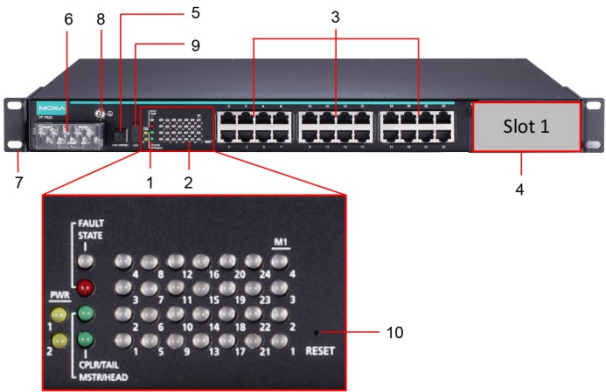

Front View




Rear View

1. System status LEDs
2. Ethernet port LEDs
3. Fast Ethernet port
4. Fiber Ethernet interface module slot
5. USB console port
6. 10-pin terminal block for power inputs, and relay output
7. Rack mounting kit
8. Grounding screw
9. USB storage port (ABC-02-USB-T)
10. Reset button

Dimensions; unit = mm (in)




Rear View

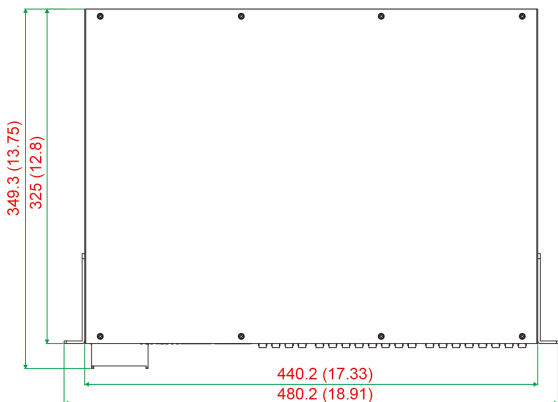

Top View




 Side View



Front View


Fiber Ethernet Interface Modules

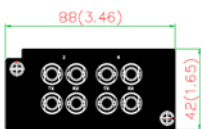

PM-7500-4MST



PM-7500-4MSC
PM-7500-4SSC

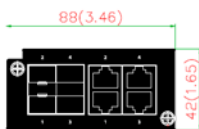

PM-7500-4GTXSFP



PM-7500-2MST



PM-7500-2MSC
PM-7500-2SSC




PM-7500-2GTXSFP

Rack Mounting

Use six screws to attach the PT switch to a standard rack.

Rack Mounting Kit

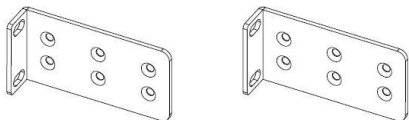

PT-7528 Side View



NOTE Two additional rack-mount ears can be ordered as an option. Use them to secure the rear of the chassis in high-vibration environments.

Wiring Requirements



WARNING

Safety First!


- Be sure to disconnect the power cord before installing and/or wiring your Moxa PowerTrans Switch.
- Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.
- If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Grounding the Moxa PowerTrans Switch

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.


Wiring the Power Inputs

The PT-7528 switches support dual redundant power supplies: *Power Supply 1 (PWR1)* and *Power Supply 2 (PWR2)*. The connections for PWR1, PWR2, and the RELAY are located on the terminal block. The front view of the terminal block connectors are shown below.

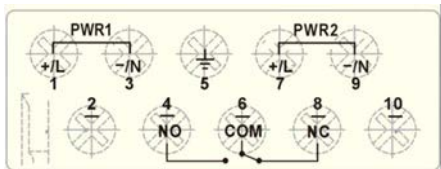

Wiring the Relay Contact

Each PT-7528 switch provides two types of relay output, at the user's option. Refer below for detailed instructions on how to connect the wires to the terminal block connector, and how to attach the terminal block connector to the terminal block receptor.

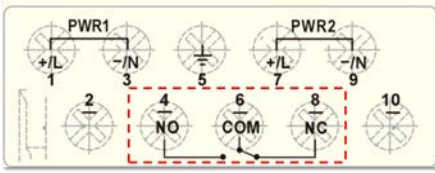


*Normal contact state
without power
applied to device*

The relay contact is used to detect user-configured events. Two wires are attached to the relay pins. The PT-7528 provides normal open and normal closed circuits at the user's option. For pin definitions refer to the table below:

Relay pin connection	Power on state	Event trigger
Pin 4 and 6	Closed circuit	Open circuit
Pin 8 and 6	Open circuit	Closed circuit

Wiring the Redundant Power Inputs

Each PT switch has two sets of power inputs: power input 1 and power input 2.

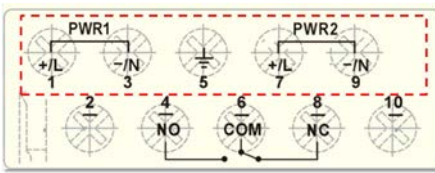

STEP 1: Insert the dual set positive/negative DC wires into PWR1 and PWR2 terminals (+ → pins 1, 7; - → pins 3, 9), or insert the L/N AC wires into PWR1 and PWR2 terminals (L → pins 1, 7; N → pins 3, 9).

STEP 2: To keep the DC or AC wires from pulling loose, use a screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

Ethernet Ports

Fast Ethernet RJ45 Twisted-Pair Cabling

PT-7528 series Ethernet switches are equipped with many 10/100BaseTX ports that allow connection to standard CAT-5 STP cables with RJ45 male connectors.

PT-7528 series products feature auto-negotiation, auto-polarity, and auto-crossover functions. For high EMC environment applications, we suggest using shielded twisted-pair cables to avoid EMC interference and to retain compliance with the IEEE 1613 standard.

Gigabit Ethernet 1000BaseTX Cabling


The IEEE 802.3ab Gigabit Ethernet standard defines 1000 Mbps Ethernet communications over distances of up to 100 meters using all 4 pairs in category 5 (or higher) balanced unshielded twisted-pair cabling. For wiring guidelines, system designers and integrators should refer to the Telecommunications Industry Association (TIA) TIA/EIA-568-A wiring standard that characterizes minimum cabling performance specifications required for proper Gigabit Ethernet operation. To ensure reliable, error-free data communication, new and pre-existing communication paths should be verified for TIA/EIA-568-A compliance.

- Data cable lengths should be as short as possible, ideally limited to 3 m (10 ft) in length. Copper data cables should not be used for inter-building communications.
- Power and data cables should not be run in parallel for long distances, and should be installed in separate conduits. Power and data cables should intersect at 90° angles when necessary to reduce inductive coupling.
- Optionally, shielded/screened cabling can be used. The cable shield should be grounded at one single point to avoid the generation of ground loops.

USB Console Connection

The PT-7528 series has one USB console port (type B connector), located on the top panel. Use the USB cable (provided in the product package) to connect the PT-7528's console port to your PC's USB port and install the USB driver (available in the software CD) on your PC. You may then use a console terminal program, such as Moxa PComm Terminal Emulator, to access the PT-7528's console configuration utility.

USB Console Port (Type B Connector) Pinouts

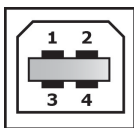


Pin	Description
1	D- (Data-)
2	VCC (+5V)
3	D+ (Data+)
4	GND (Ground)

USB Storage Connection


The PT-7528 series has one USB storage port (type A connector) on the front panel. Use Moxa's ABC-02-USB-T automatic backup configurator to connect the PT-7528's USB storage port for configuration backup, firmware upgrade, or system log file backup.

ABC-02-USB Installation

Plug the ABC-02-USB into the USB storage port of the Moxa PT-7528 series. We suggest attaching the ABC-02-USB to a wall with an M4 screw.

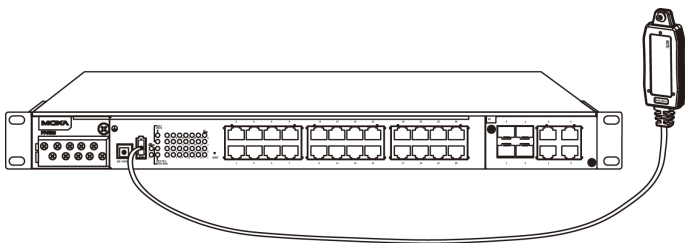

 USB Storage Port (Type A Connector) Pinouts



Pin	Description
1	VCC (+5 V)
2	D- (Data-)
3	D+ (Data+)
4	GND (Ground)

The Reset Button

Depress the Reset button for five continuous seconds to load the factory default settings. Use a pointed object, such as a straightened paper clip or toothpick, to depress the Reset button. When you do so, the STATE LED will start to blink about once per second. Continue to depress the STATE LED until it begins blinking more rapidly; this indicates that the button has been depressed for five seconds and you can release the Reset button to load factory default settings.

NOTE DO NOT power off the switch when loading default settings

LED Indicators

LED	Color	State	Description
STATE	GREEN	On	System has passed self-diagnosis test on boot-up and is ready to run.
		Blinking	<ul style="list-style-type: none">• 1 blink every sec: The switch is being reset• 1 blink every 2 sec: The switch is connected to the ABC-02-USB.
	RED	On	<p>The system failed self-diagnosis on boot-up.</p> <ul style="list-style-type: none">• RAM Test Fail / System Info. Read Fail / Switch Initial Fail / PTP PHY Error. (+ Green MSTR lit on : HW FAIL)• FW Checksum Fail / Uncompress Fail. (+ Green Coupler lit on: SW FAIL)

LED	Color	State	Description
FAULT	RED	On	One of the following situations exists: <ul style="list-style-type: none"> • The signal contact is open. • ABC Loading/Saving Failure. • The port has been disabled because the ingress multicast and broadcast packets exceed the ingress rate limit. • Incorrect loop connection in a single switch. • Invalid Ring port connection.
		Off	The system is operating normally.
PWR1	AMBER	On	Power is being supplied to the main module's power input PWR1.
		Off	Power is not being supplied to the main module's power input PWR1.
PWR2	AMBER	On	Power is being supplied to the main module's power input PWR2.
		Off	Power is not being supplied to the main module's power input PWR2.
MSTR/ HEAD	GREEN	On	One of the following situations exists: <ul style="list-style-type: none"> • The switch is set as the Master of the Turbo Ring, or as the Head of the Turbo Chain. • POST H.W. Fail (+Stat on and Fault blinking).
		Blinking	One of the following situations exists: <ul style="list-style-type: none"> • The switch has become the Ring Master of the Turbo Ring. • The switch has become the Head of the Turbo Chain after the Turbo Ring or the Turbo Chain went down. • The switch is set as a member of the Turbo Chain and the corresponding chain port is down.
		Off	One of the following situations exists: <ul style="list-style-type: none"> • The switch is not the Master of this Turbo Ring. • This switch is set as a member of the Turbo Chain.
CPLR/ TAIL	GREEN	On	One of the following situations exists: <ul style="list-style-type: none"> • The switch's coupling function is enabled to form a back-up path. • The switch is set as the Tail of the Turbo Chain. • POST S.W. Fail (+Stat on and Fault blinking)
		Blinking	One of the following situations exists: <ul style="list-style-type: none"> • Turbo Chain is down. • The switch is a member of the Turbo Chain and the corresponding chain port is down.
		Off	One of the following situations exists: <ul style="list-style-type: none"> • This switch has disabled the coupling function. • This switch is a member of the Turbo Chain.

LED	Color	State	Description
FAULT + MSTR/HEAD + CPLR/TAIL		Rotate Blinking Sequentially	ABC-02-USB is importing/exporting files.
STATE + FAULT + MSTR/HEAD + CPLR/TAIL		Blinking	2 blinks per sec: The switch is being discovered/located by MXview.
Ports 1 to 24	GREEN	On	Port's 100 Mbps link is active
		Blinking	Data is transmitting at 100 Mbps
		Off	Port's link is inactive
	AMBER	On	Port's 10 Mbps link is active
		Blinking	Data is transmitting at 10 Mbps
		Off	Port's link is inactive
M1 Ports 1 to 4	GREEN	On	Port's highest speed link is active
		Blinking	Data is transmitting at the highest speed
		Off	Port's link is inactive
	AMBER	On	Port's non-highest speed link is active
		Blinking	Data is transmitting at non-highest speed
		Off	Port's link is inactive

Specifications

Technology	
Standards	IEEE 802.3 for 10BaseT IEEE 802.3u for 100BaseT(X) and 100BaseFX IEEE 802.3ab for 1000BaseT(X) IEEE 802.3z for 1000BaseX IEEE 802.3x for Flow Control IEEE 802.1D-2004 for Spanning Tree Protocol IEEE 802.1w for Rapid STP IEEE 802.1s for Multiple Spanning Tree Protocol IEEE 802.1Q for VLAN Tagging IEEE 802.1p for Class of Service IEEE 802.1X for Authentication IEEE 802.3ad for Port Trunk with LACP
Protocols	IGMP v1/v2, GMRP, GVRP, SNMPv1/v2c/v3, DHCP Server/Client, BootP, TFTP, SNTP, SMTP, RARP, RMON, HTTP, HTTPS, Telnet, SSH, Syslog, DHCP Option 66/67/82, EtherNet/IP, Modbus/TCP, LLDP, IEEE 1588 PTP V2, IPv6, NTP Server/Client, MMS
MIB	MIB-II, Ethernet-like MIB, P-BRIDGE MIB, Q-BRIDGE MIB, Bridge MIB, RSTP MIB, RMON MIB Groups 1, 2, 3, 9
Flow control	IEEE 802.3x flow control, back pressure flow control
Interface	
Fast Ethernet	10/100BaseT(X) or 100BaseFX (SC/ST connector)
Gigabit Ethernet	10/100/1000BaseT(X), 1000BaseSX/LX/LHX/ZX (SFP slot, LC connector)
Console Port	USB-serial console (Type B connector)
Storage port	USB storage port (Type A connector)
System LED Indicators	STAT, PWR1, PWR2, FAULT, MSTR/HEAD, CPLR/TAIL

Alarm Contact	One relay output with current carrying capacity of 3 A @ 30 VDC or 3 A @ 240 VAC
Optical Fiber (100BaseFX)	
Distance	Multi-mode: 0 to 5 km, 1300 nm (50/125µm, 800 MHz*km) 0 to 4 km, 1300 nm (62.5/125µm, 500 MHz*km) Single mode: 0 to 40 km, 1310 nm (9/125µm, 3.5 PS/(nm*km))
Min. TX Output	Multi-mode: -20 dBm; Single mode: -5 dbm
Max. TX Output	Multi-mode: -10 dBm; Single mode: 0 dbm
RX Sensitivity	Multi-mode: -32 dBm; Single mode: -34 dbm
Power	
Input Voltage	WV: 24/48 VDC (18 to 72 V) HV: 110/220 VDC/VAC (88 to 300 VDC and 85 to 264 VAC)
Input Current	Max. 0.741 A @ 24 VDC Max. 0.364 A @ 48 VDC Max. 0.147/0.077 A @ 110/220 VDC Max. 0.283/0.19 A @ 110/220 VAC
Inrush Current	WV model: 1.51 A @ 24 VDC (0.1 ms), 1.80 A @ 48 VDC (0.1 ms) HV model: 7.06 A @ 110 VDC (0.1 ms), 15.14 A @ 220 VDC (0.1 ms)
Physical Characteristics	
Housing	IP40 protection, metal case
Dimensions (W x H x D)	440 x 44 x 325 mm (17.32 x 1.73 x 12.76 in)
Weight	4900 g
Installation	19" rack mounting
Standards and Certifications	
Safety	UL 508
Power Automation	IEC 61850-3, IEEE 1613
Road Traffic	NEMA TS2
Rail Traffic	EN 50121-4
EMI	FCC Part 15 Subpart B Class A, EN 55032 class A
Environmental Limits	
Operating Temp.	-40 to 85°C (-40 to 185°F) Cold start of min. 100 VAC at -40°C
Storage Temp.	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity.	5 to 95% (non-condensing)
Warranty	
Warranty Period	5 years
Details	See www.moxa.com/warranty

Rack Mounting Instructions

- 1. Elevated Operating Ambient:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- 2. Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- 3. Mechanical Loading:** Mounting of the equipment on the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- 4. Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- 5. Reliable Grounding:** Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

NOTE The rackmount ears can be equipped on the front or rear of the PT-7528 switch.

Restricted Access Locations

- This equipment is intended to be used in Restricted Access Locations, such as a computer room, with access limited to SERVICE PERSONAL or USERS who have been instructed on how to handle the metal chassis of equipment that is so hot that special protection may be needed before touching it. The location should only be accessible with a key or through a security identity system.
- External metal parts of this equipment are extremely hot!! Before touching the equipment, you must take special precautions to protect your hands and body from serious injury.



Power Connection Warning

You should always connect both power supplies when using this device, and disconnect both power supplies when this device is not in use. If only one power supply is connected, you could receive a hazardous electric shock by touching the unconnected terminals of the other power supply.

All power connection wiring must be done by a qualified electrician and follow the National Electrical Code, ANSI/NFPA 70, and Canadian Electrical Code, Part I, CSA C22.1. An IEC certified or UL listed single-phase type circuit-breaker, rated for a maximum of 20 A, should be installed between main circuit and the device.